FLITE-KING



12 GAUGE PUMP-ACTION SHOTGUNS World's fastest firing pump-action shotguns

Cal. Nos. 8149, 8130, 8120 8121, 8122, 8110 8100, 8101, 9102



THE HIGH STANDARD MANUFACTURING CORP.

FLITE-KING ''Trophy'',''Citation'', ''DeLuxe'', ''Speciat'', ''Field'',SHOTGUNS


Your new "Hi-Standard" FLITE-KING pump-action shotgun offers you the fastest firing short-stroke (3½") firearm in the world. Often, that extra fraction-of-a-second shot could mean the difference between downing the game or losing it. That's when PLITE-KING comes through. Polished action parts function so smoothly, your FLITE-KING will eject by gravity alone. Point the gun upward and shake it. Forearm "free-falls" to open! There's your proof of slickest, speediest performance. And, for the ultimate in accuracy, the barrel is permanently interlocked with teceiver for perfect alignment. Shoot as fast as you think; point, swing, and follow without interruption. That's FLITE-KING by Hi-Standard.


CLEANING & LUBRICATING . . .

Should powder residue or any dirt accumulate in the barrel, it can easily be removed. Open the action fully, rest the heel of the stock on the floor and hold the gun barrel near the muzzle with the left hand. Push a brass cleaning brush soaked in Nitro solvent through the muzzle end, and work it up and down throughout the entire length of the bore. Follow this by wiping the bore with clean patches until the last one comes out unsoiled. A light protective film of oil may be applied with a patch if desired.

Periodically, dirt and fouling should be removed from the bolt, extractors, and other operating parts. This should be done with a tooth brush soaked in Nitro solvent. Following this, these parts should be wiped dry and oiled lightly.

Your FLITE-KING is treated with new siliconized and polarized oil. This exclusive, patented process gets down into the pores of the steel and protects against perspiration and other corrosive elements which cause rust. This oil makes Hi-Standard guns the most rust resistant of any you can buy. It gives the best lubrication of any oil tested. And it protects and beautifies stock and forearm.

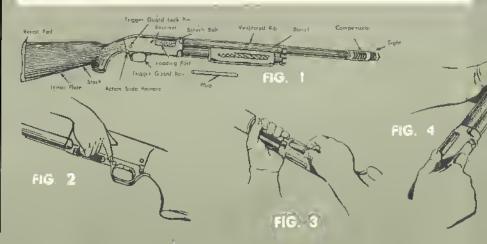

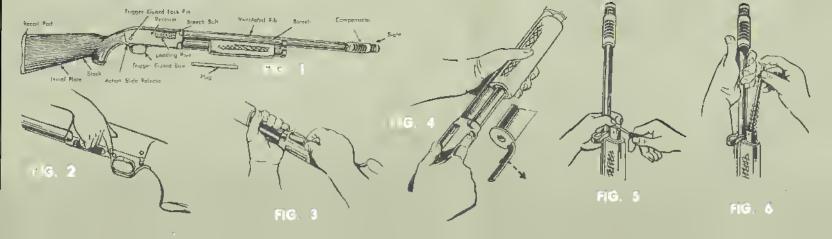

OPERATING INSTRUCTIONS . . .

TO MAKE GUN SAFE: Safety is located in guard bow foreward of trigger. (See Figure 2). With hammer cocked push safety bur from left to right until red band is covered. This movement locks trigger and gun cannot be fired, Always lock the trigger when carrying a loaded gun.

TO RELEASE SAFETY: Push safety from right to left exposing red band and gun is ready to fire.

TO LOAD CHAMBER: Open action fully by pulling back on fore-end. If gun is locked, press in action slide release located in rear left side of guard bow. (See Figure 1). Drop shell in loading port. (See Figure 1).


TO LOAD MAGAZINE: With the safety locking the trigger, insert shells upward into bottom of receiver as in Figure 3 and push forward into magazine tube past cartridge stops. Repeat until magazine is full. Magazine normally holds 5 shells, or 2 with 8" plug in magazine.


TO OPERATE: When gun is fired, the action automatically unlocks so that the fore end slide can be drawn fully back, and then forward. This operation extracts and ejects the fired shell, cocks the hammer and carries loaded shell into chamber. Gun is now loaded, double locked and ready to fire. Always lock trigger with the safety to prevent accidental firing.

TO REMOVE LOADED SHELL FROM CHAMBER WITHOUT FIRING: Lock trigger. Press in action slide, release button and open action slowly until shell is opposite ejection port. Place palm of your hand just over port opening and pull back on fore-end and shell will drop out.

TO REMOVE LOADED SHELLS FROM MAGAZINE: Turn gun over with trigger guard up, barrel pointed to left, and press back left carriage stop as in Figure 4; this releases shell from within magazine. Remove shell and repeat until magazine is empty.

PLUGGING MAGAZINE FOR 3 SHOTS: Remove magazine band screw. Move magazine band to one side, (See Figure 5 and 6). Remove both magazine

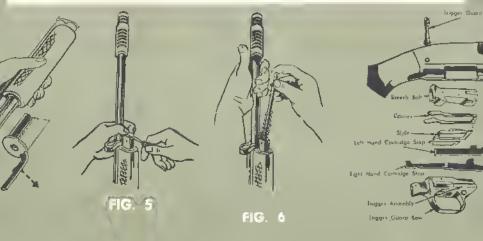

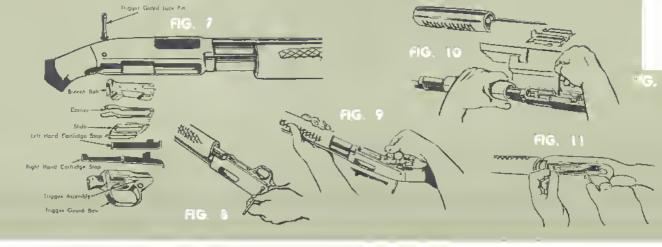

tube locking screws while holding magazine cap firmly. Remove magazine cap being careful to hold back magazine spring which is under tension. Insert wooden plug and reassemble. This reduces magazine capacity to only 2 shells with one shell in the chamber, allowing 3 shells in gun to comply with game laws of certain states.

DISASSEMBLING . . .

TO REMOVE TRIGGER ASSEMBLY: With pencil point or small screw driver push out trigger lock pin from right to left side of receiver as in Figure 8, Lift rear part of trigger guard bow until projection of guard clears stock; then pull up and to the rear as in Figure 9.

CARTRIDGE STOP, RIGHT HAND: Disengage right hand cartridge stop from round


slot in receiver wall and lift out of receiver.

ACTION SLIDE: Move fore-end rear-ward until all shoulders of slide are centered in the square cuts in receiver. Then while pulling slide upward move fore-end fully forward. Action bar is now free from slide. Hold slide up, make sure it is disengaged from breech block by moving breech block forward and lift slide out of receiver. (See Figure 10).

CARRIER AND BREECH BOLT: Push fore-end to rear and slide breech bolt forward inside receiver. Using cartridge stop as tool, disengage the right side of the carrier from hole in receiver. Then disengage left side, and lift carrier out of receiver as in Figure 11. With fore-end forward, slide breech bolt fully to the rear, and holding it at the rear, lift up and out of receiver as in Figure 12.

ASSEMBLING . . .

- 1. BREECH BOLT: With round side of breech bolt facing receiver opening and with extractors forward, insert into receiver bottom and slide forward.
- 2. CARRIER: Move fore-end fully to the rear, grasp front and sides of carrier as in Figure 13, flat side up, squeeze carrier sides slightly, and engage hinge ends in proper holes in receiver. Raise front end of the carrier, then lower to rest over breech bolt.

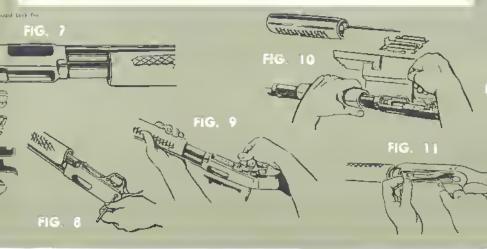

- 3. SLIDE: Move breech bolt to the rear, centered in square cuts in receiver. Move fore-end rear-ward until action bar hook is slightly back of the forward square cut in receiver, place slide over receiver cuts and drop into receiver. (Make sure action bar hook has engaged the corresponding cut in slide).
- 4. CARTRIDGE STOP: R.H.: Insert right hand cartridge stop, with round studslide into stud opening in receiver.
- 5. TRIGGER ASSEMBLY: With fore-end fully forward and the hammer of the trigger assembly in a cocked position, hold cartridge stop flush with receiver walls, insert front end of trigger guard with guide prongs fitting into guide grooves in receiver walls, push forward and down. (See Figure 14).
- 6. TRIGGER GUARD LOCK PIN: Push small end of pin into receiver from left to right. (Before attempting to drive in pin, carefully align trigger guard until pin hole shows clear passage).

If a left hand safety is desired, order Left Hand Safety Button, The installation procedure is as follows:


Place the gun with the trigger guard up, Remove the old safety as follows:

- 1. Cock the gun.
- Push sufety to expose red band.
- With a pair of long nosed pliers grasp the safety on the side opposite the red band and rotate the safety button slightly clock-wise and push in.
- Pull on the safety bitton. (Make sine that the plunger on the opposite side of the trigger guard does not full out).

Insert the left liand safety button from the side opposite the plunger. Make sure that the end with the red band is inserted first and that the notches are down. While holding the plunger down, push the safety button through the trigger guard until the plunger engages either of the two notches.


SPECIFICATIONS .

	DEŁUXE FIELD	TROPHY, Citation Special
GAUGE	12	12
CHOKE	Fult, Modified, Improved.	Adjustable
WEIGHT (LBS.)	71/4	73/4
LENGTH OF PULL	141/6"	14 1/a"
DRDP AT CDM8	138"	13/6"
DROP AT HEEL	21/4"	21/4"
BARREL LENGTH	28"	26 1/4"
STROKE	31/2"	37/20
SIGHT	Brass	Brass
	Front Sight	Front Sight
LENGTH	471/2"	461/4"

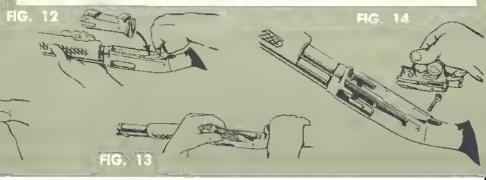

KEY CHART, PARTS AND ASSEMBLIES

Obtainable from your dealer or gunsmith. When ordering parts, be sure to state ALL identifying numbers stamped on barrel of your FLITE-KING. Please make sure shotgun is UNLOADED when you ship it in for service. Send Parcel Post or Express PREPAID only. Please do not ship in special cases or containers, since factory cannot be responsible for return of such special equipment.

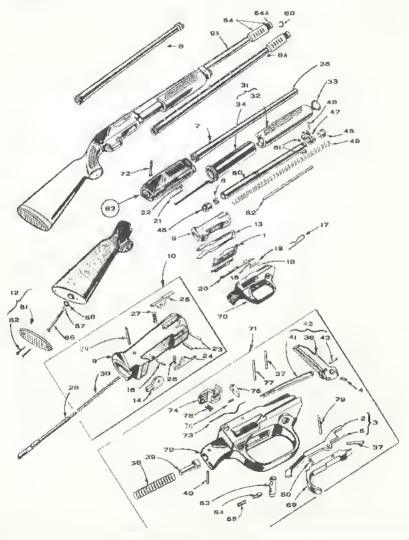

SHIPPING INSTRUCTIONS : .

For safely of all concerned, be absolutely certain gun is *empty*. Package them in throwaway carton, *do not* ship in carrying cases or other special containers. Factory cannot be responsible for return of such special containers. Ship PREPAID, express or insured parcel post. Minimum factory charge, \$6.50.

*1 100-B Action Slide 39 639 Hommer Spring Go *2 101-B Action Slide Release Level 40 135 Hommer Spring Re	
NO. DESCRIPTION NO. NO. DESCR *1 100-B Action Slide 39 639 Hommer Spring Grand *2 101-B Action Slide Release Leval 40 135 Hommer Spring Re	uide .
*1 100-B Action Slide 39 639 Hommer Spring Go *2 101-B Action Slide Release Level 40 135 Hommer Spring Re	
±2 101-B Action Slide Release Level 40 135 Hammer Spring Re	
Z Olive Street Street	laining rin
3 IVI UIV	
4 102-B Action Slide Release Lever Oper, 142 131-BM Hommer & Strut A	(55γ.,
Pin 43 137 Hammer Strut Pin	
5 103 B Action Slide Release Level Spring 45 8737 Magazine Cop	
6 176-B Action Slide Spring (Deluxe, 46 142-B Magazine Followe Citation, Traphy) 47 139-1 Magazine Sond	1
The state of the s	
Table (Magazine Bank S	CIEW
The state of the s	
et 1 76 1 11	
AC A PT/2 Paral w/Commonling Cons	cxing aciews
(Citation)	
*8-8 B773 Barrel w/Rib & Compensating N.I. 11950 Chake Assy, (Spec	
Cong (Looky) 54 B/65 Choke Assy, Oncis	
*9 B731 Boll pensoting Coge	
*10 8741 Boll Assembly 8 Spring) For Gr	
72 B704 Stock Assy, Pfein w/Bull Plate 54 B775 Choke Assy, (Inclu	
12 B744 Stock Assy. w/Checkering, Bull pensaling Coge, 8 Spring) For Gr	
13 B742 Collies Assembly Flament & Suria	
14 10B Carrier Operating Com 50 11429 Chaka Click Series	
15 109 Carrier Operating Com Ref. Pill N.1 744 Chake Can	9
16 864 Carlindge Stap Pin AN I B762 Chake Compensati	ing Cage (For
17 B65 Cartridge Stop Pin Relaining Clip Plain Barrel	119 4030 (14)
1B 199 Callidge Stap Spring 4N.I. 8772 Chake Compensati	ng Coge (For
19 192 Cartridge Stop, L.H. Borrel w/Rib)	1
20 Till-M Cortridge Stop, R.M. 61 8601 Bull Plate	
21 115-B Ejector 62 345 Bull Plate Science	(2) ea.
22 116-B Ejector Screw N.J. B622 Bull Plate Trim	
23 119 Extractor Hinge in (2) ea. 63 B739 Safety Button, L.H	l,
24 11B.B Extractor, L.H. 63 B73B Safety Button, R.H	ŧ.
25 755 Extractor, R.H. 64 4040 Sofety Bullon Plu	пġ€I
26 167-B Extractor Spring, L.H. 65 360 Safety Button Plur	nger Spring
27 625 Extractor Spring, R.H. 66 666 Stock Balt	
28 773 Firing Pin 67 667 Stock Balt Lock We	oshei
29 124 Fixing Pin Relaining Pin 6B 668 Stack Ball Washe	1
30 125 Firing Pin Spring 69 6740 Triager	
31 8706 Forehand Assy., Plain 70 6758 Trigger Guard	
31 B743 Forehond Assy., Deluxe w/ 71 8745 Trioger Guard As	\$V.
Checkering 72 159.8 Trigger Goold Ret	aining Pin
32 B702 Forehand Operating Handle 72 146 Talapa Guard Reli	
32 B734 Forehand Operating Handle	
W/Checkeling	1
33 128-B Forehand Open bling Sleave Front 127 142 Yilliams Last Powel	
1701	
34 127-6m Intending Operating Today Arry	ID
35 130 Fiori signi	**
30 ISI'D HORINGE	
3/ 13Z Hommer Hinge Fin	
38 762 Hommer Spring B2 180 Wood Plug 6	

B3

OTHER HI-STANDARD FIREARMS



PRINTED IN U.S.A. 660

HAMDEN 14, CONNECTICUT